

THANK YOU

You have purchased the highest quality professional broadcast spreader available on the market today. The SSD is the accumulation of proven performance and will provide you with years of trouble-free service. In the event you should have any questions or comments, please call our professional support staff.

BEFORE YOU BEGIN

To assemble your new spreader, we highly recommend that you read all the instructions thoroughly, familiarize yourself with the assembly and components, and verify that all parts are included in the package.


Our toll-free number is 1-800-225-2639 (U.S. Only).

Prior to assembly, you will need the following tools:


7/16" Wrench or adjustable wrench



Needle nose pliers

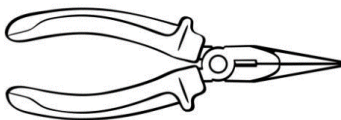

Grease gun

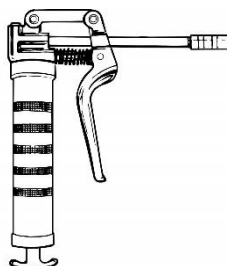

IN THE BOX

- (1) Upper handle and control assembly
- (1) Hopper assembly
- (2) Tires
- (1) Hopper handle
- (2) Hardware Pack
- (1) Rain cover


- **The hardware pack (P142424) includes the following:**

- (2) 3/16-1/4" x 1" Cotter pin-bow tie SS
- (2) 3/16" x 2" Cotter pin
- (4) 1/4-20 x 1-1/2" HHCS SS
- (4) 1/4-20 nylon locknut SS
- (1) Gauge calibration


Assembly Steps

Step 1: Remove spreader and components from carton.


Step 2: Slide Wheels onto each end of Axle with the longer portion of the Wheel hub facing the Hopper. Secure Wheels with 3/16 dia. x 2" Cotter Pins.

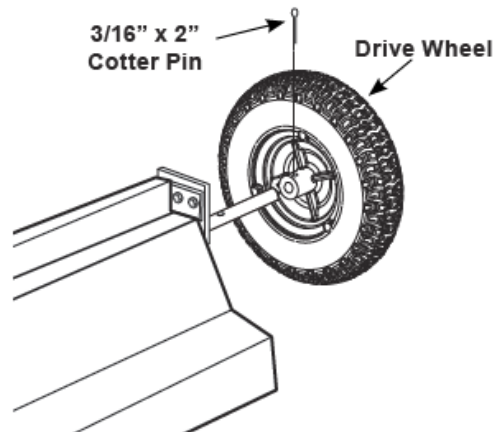


Step 3: Stand spreader upright on Wheels. Attach Upper Handle assembly to Handle Brace (make sure Handle is positioned as shown) using (4) 1/4-20 X 1 1/2" Hex Bolts, and (4) Locknuts. Tighten securely.

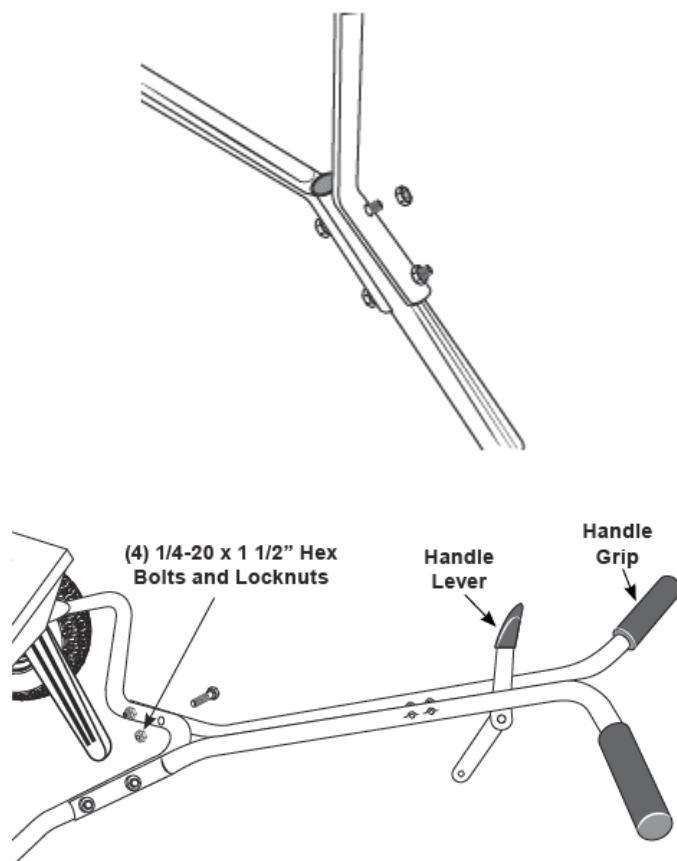

Step 4: Slide the ends of the Control Tube Braces over the Studs on the Shutoff Bar Brackets, secure with Cotter Pins. Install Hopper Handle on front of spreader using (2) 1/4-20 x 1/2" Hex Bolts and Locknuts.

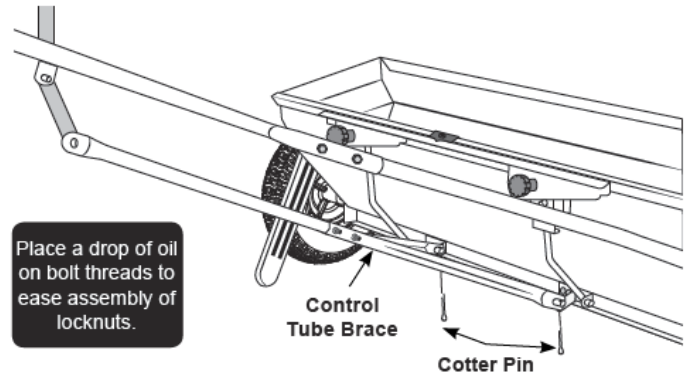

Step 5: To check spreader for completed shutoff, pull the Handle Lever back to the "OFF" position. Turn spreader over to see if the Shutoff Bar completely covers the holes in the bottom of the Hopper. If not, stand the spreader upright on Wheels push the Handle Lever forward to the "ON" position. Loosen the Bolts in the Hopper holding the Handle Brace. Push down on the Handle Brace and the front of the Hopper. Retighten Bolts and check the shutoff.

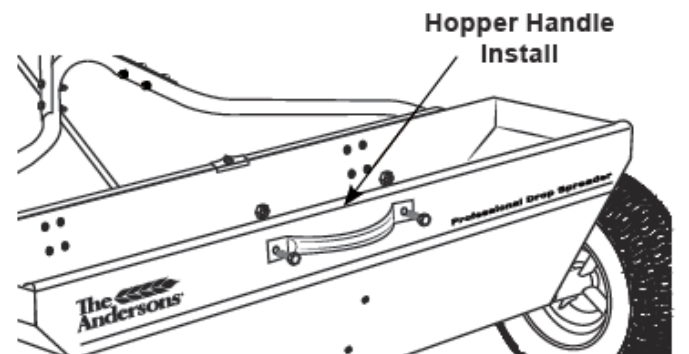

Operation

Step 1: Before filling Hopper, make sure spreader Handle Lever is in the “OFF” position. Always fill spreader on walk or drive, not on the lawn.



Step 2: Loosen Rate Control Knobs and move the Tie Bar to setting recommended for the product applied. If setting is not known, refer to “**DETERMINING APPLICATION RATES**” section of this book. Retighten knobs after setting is made.

Step 3: Always push spreader, do not pull. Start spreader in motion and as it passes over the area to be treated, push Handle Lever to the “ON” position. Close Handle Lever at the end of each pass.

Step 4: Operate spreader at 3 MPH pace. (33.3 feet in 7.5 seconds)

Step 5: Apply two header strips at each end of area to be treated and then proceed lengthwise between the header strips. Be sure to overlap the wheel tracks slightly to prevent streaking.

Step 6: When applying lime, do not use limestone that is so finely ground that it will pack inside the Hopper, or use hard, abrasive particles which will damage the spreader. Use only compacted, free flowing, non-abrasive lime products.

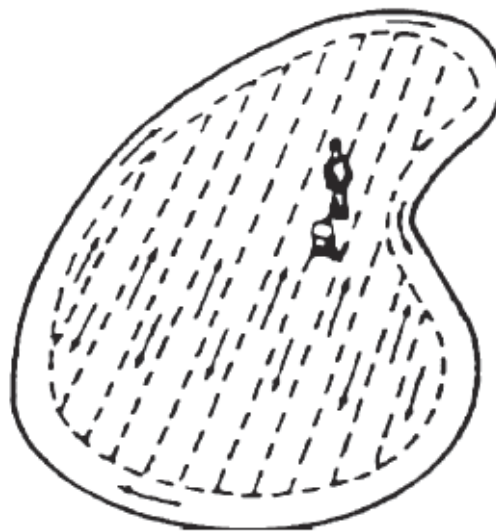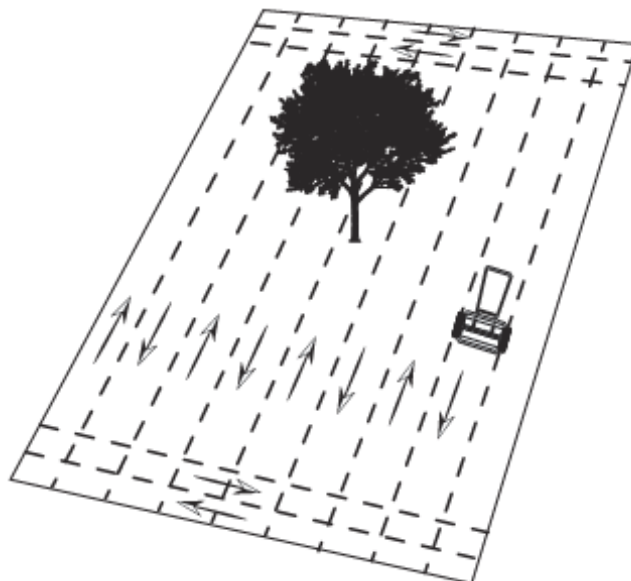


Determining Application Rates

The following procedure provides a means of accurately determining drop spreader settings when settings do not appear on the package, or to “fine tune” the manufacturer’s recommend settings. Spreader rates can vary due to walking speed, condition of turf, humidity, physical characteristics of the product being applied, or condition of the spreader. It is good practice to double check settings using the following method

PROCEDURE	EXAMPLE
Step 1: The manufacturer will recommend coverages on the product package. Generally, it is stated as applying a certain number of pounds of product per 1,000 square feet.	The contents of this package (25 lbs.) covers 2,000 square feet.
Step 2: Determine the amount of material in pounds to cover 100 square feet. Add two zeros to weight of bag and divide that by the square foot coverage.	2,500 divided by 2,000 square feet= 1.25 lbs.
Step 3: To change the decimal portion of answer in step #2 to ounces, multiply decimal portion by 16.	0.25 x 16 oz. = 4 oz. Total weight = 1 lb.- 4 oz.
Step 4: On a clean walk of driveway, measure out 33.3 feet- the distance required to cover 100 square feet.	
Step 5: Add a measured amount of product to the spreader- 2 to 3 times the recommended rate. Operate spreader at a brisk walking speed (3 mph of 33.3 feet in 7.5 sec.) over the measured distance. Empty the spreader and weigh the amount left. Compare with the beginning amount; the difference is the amount applied. Adjust the setting up or down to achieve the correct application rate.	

How to Verify Spreader Calibration

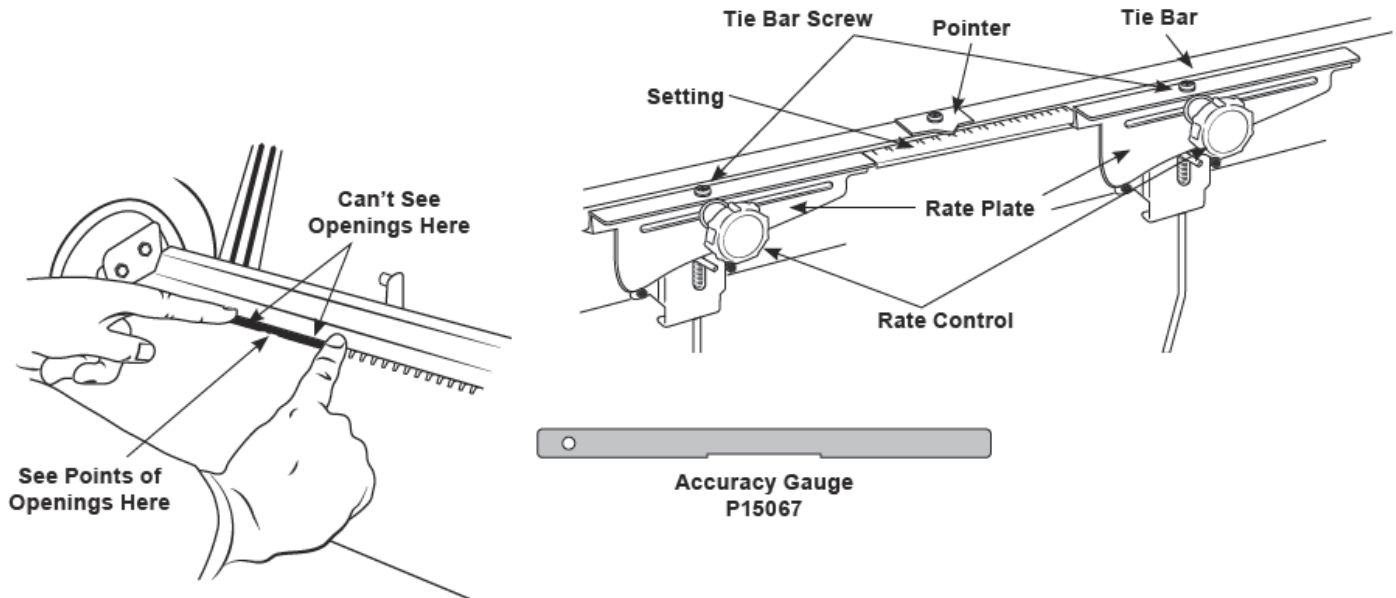


Step 1: Loosen both rate control knobs and set spreader setting at #4 1/2. With the operating lever in the open position, turn spreader upside down.

Step 2: Place accuracy gauge in position as shown above with notch facing away from shut off bar. Check openings near the ends and in the middle of the spreader. Calibration is correct when you see the points of the opening in the center of the gauge, but do not see any portion of the openings on either side of the center section. If calibration is not correct, continue to next section.


How to Adjust Spreader Calibration

Step 1: IF OPENINGS ARE EVEN ALL THE WAY ACROSS THE HOPPER as shown below, but the openings are too large or small, loosen both rate control knobs and move the rate plates to close or widen the openings using the accuracy gauge until calibration is correct. Retighten rate control knobs.



Step 2: Turn spreader upright. Loosen pointer screw and align pointer at setting #4 1/2. Tighten pointer screw.

Step 1: IF OPENINGS ARE WIDER ON ONE END OF THE SPREADER AS COMPARED TO THE OPPOSITE END as shown below, loosen both rate control knobs and the two tie bar screws (do not remove screws).



Step 2: Working on one end of the spreader, move the rate plate closest to that end to adjust the opening using the accuracy gauge until calibration is correct. Repeat on opposite end. Check entire length and adjust rate plates as required to assure spreader is in calibration. Retighten rate control knobs.

Step 3: Turn spreader upright and move tie bar so setting #4 1/2 is aligned with the pointer. Retighten tie bar screws.


Maintenance

Step 1: Never store material in spreader. Return unused product to its original container.


Step 2: Set Rate Slide on the highest number, open spreader, and spin Wheels to remove excess material.

Step 3: Wash out Hopper thoroughly after each use to remove material clinging to surfaces. Pay close attention to area between the Shutoff Bar and Hopper. Allow spreader to completely dry.

Step 4: Oil bottom of Hopper, Control Housing Spring and Agitators at the Center Bearing. Lubricate Axle Bearings with grease. Store spreader in open position.

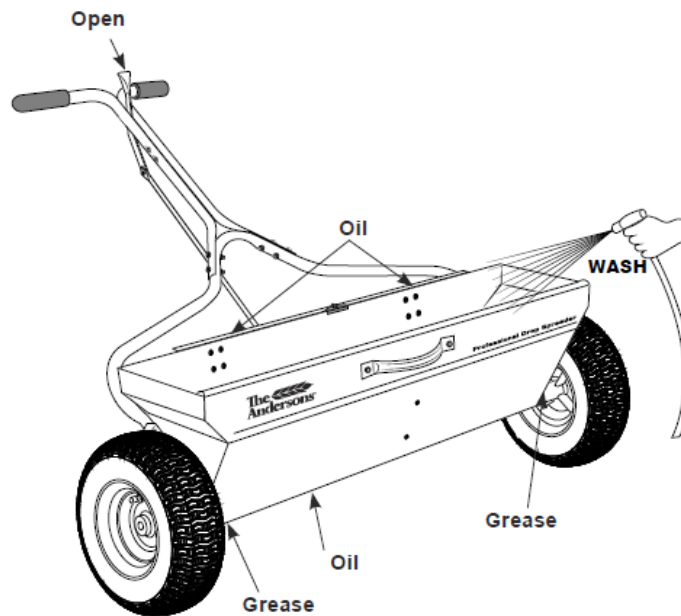

Parts Diagram—LCO-1000

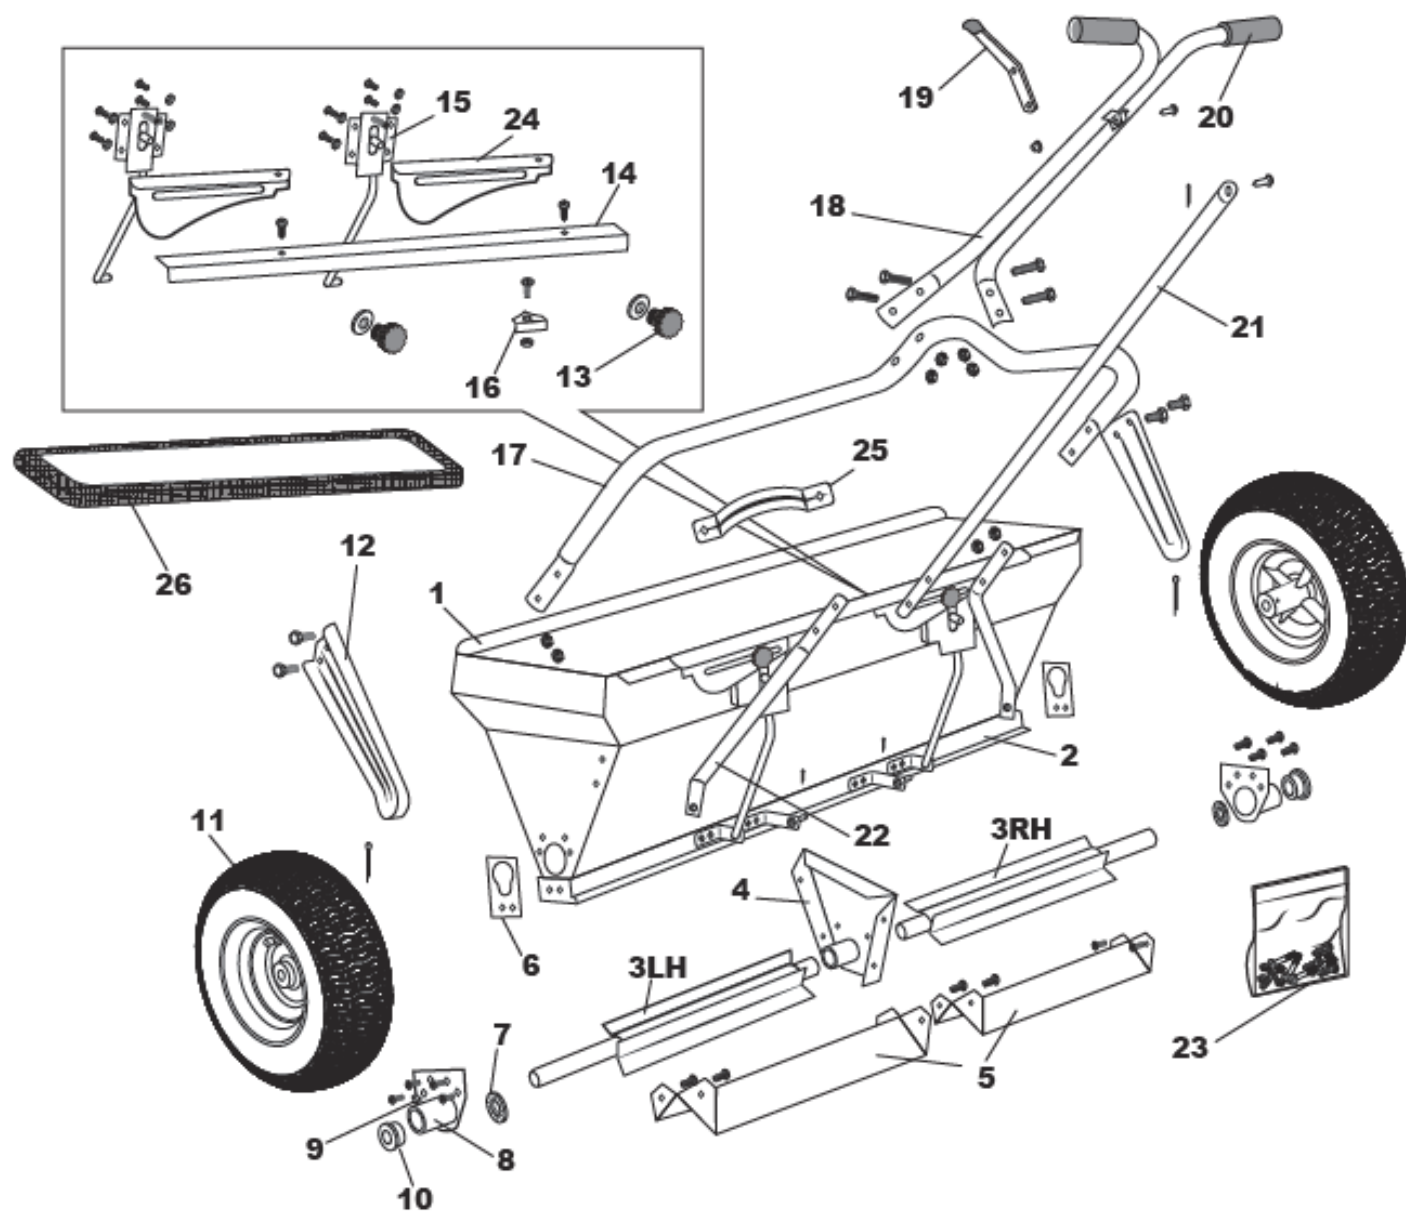

HOW TO ORDER SPARE PARTS

See diagram for assistance in identifying specific parts.

For parts orders, call 1-574-848-7491. (Note: Sales of parts for the Andersons spreaders are handled by Earthway, Inc.)

IMPORTANT: When ordering replacement parts, always provide the following information:

- ☒ Part Number (DO NOT use key numbers when ordering parts. ALWAYS use part numbers.)
- ☒ Part description
- ☒ The Andersons model LCO1000 (product code ASPLCO1000)

MODEL # LCO-1000 Parts List		
KEY #	PART #	DESCRIPTION
1	P144752-09	HOPPER ASSEMBLY
2	P144791SS	SHUTOFF BAR ASSEMBLY*
3 RH.	P146431	AGITATOR/AXLE ASSEMBLY-LH. *
3 LH.	P146441	AGITATOR/AXLE ASSEMBLY-RH.*
4	P14590	BEARING SUPPORT ASSEMBLY*
5	P14589	AGITATOR BAFFLE* (2)
6	P14227SS	END HANGER* (2)
7	P14007	AXLE GREASE SEAL* (2)
8	P142221SSA	BEARING END PLATE ASSEMBLY* (2)
9	P90005	GREASE FITTING* (2)
10	P14006	AXLE BEARING* (2)
11	P15043	WHEEL & TIRE ASSEMBLY (2)
12	P12714SS	LEG (2)
13	P12704	RATE CONTROL KNOB* (2)
14	P14237SS-S	TIE BAR*
15	P14286SS	SPRING HOUSING ASSEMBLY* (2)
16	P12708SS	POINTER*
17	P15029SS	HANDLE BRACE
18	P149062	UPPER HANDLE ASSEMBLY
19	P127112SS	HANDLE LEVER ASSEMBLY
20	P14870	HANDLE GRIP (2)
21	P14415SS	CONTROL TUBE
22	P14409SS	CONTROL TUBE BRACE (2)
23	P142424	FASTENER PACKAGE
24	P14236SS	RATE PLATE* (2)
25	P15048SS	LIFTING HANDLE
26	PJ970	HOPPER COVER

* Indicates parts in Hopper Assembly



**For More
Information
Call . . .**

1-800-225-2639
(U.S. Only)

The Andersons' toll-free
Helpline. This helpline is
provided to give you more
Information about
Andersons Turf Products.



**Or Visit Our
Website At ...**

www.andersonsturf.com
www.andersonsturf-intl.com

The Andersons, Inc.
480 Dussel Drive
Maumee, OH 43537 USA

CUSTOMER SERVICE

1-800-225-2639 | www.andersonsturf.com | help@andersonsplantnutrient.com

The Andersons Inc, 1947 Briarfield Blvd, Maumee, OH 43537

ONE YEAR WARRANTY

The Andersons warrants to Purchaser the following:

1. Product will be free of defects in materials and workmanship for a period of one year from date of purchase.
2. The axle gear, gear support, pinion gear, axle, and axle bearings have a limited lifetime warranty to be free of defects in materials and workmanship.
3. If the spreader is used for commercial rental the Limited Warranty shall be limited to a period of 90 days.
4. All unit and part replacement will be performed at the reasonable discretion of The Andersons.
5. Labor charges are not covered, and the unit need not be returned to the dealer for warranty service.
6. Proof of purchase must be supplied to The Andersons.
7. For warranty questions, contact Andersons at 1-800-225-2639.

The Andersons sole obligation under this warranty is limited to repairing or replacing the defective part.

This warranty does not extend to any Product or parts thereof that have been allowed to corrode, subjected to misuse, neglect, accident, or modification by anyone other than The Andersons or that have been affixed to any nonstandard accessory attachment or that have been used, stored, installed, maintained operated in violation of The Andersons instructions or standard industry practice. No agent, employee or representative of The Andersons has any authority to bind The Andersons to any affirmation, representation or warranty concerning the Product and any affirmation, representation or warranty made by any agent, employee or representative shall not be enforceable by Purchaser.

THIS WARRANTY EXTENDS ONLY TO THE ORIGINAL PURCHASER AND IS EXPRESSLY IN LIEU OF ANY OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS OR INTENDED USE FOR A PARTICULAR PURPOSE AND OF ANY OTHER OBLIGATION ON THE PART OF The Andersons. The Andersons SHALL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL LOSS, DAMAGE OR EXPENSE DIRECTLY OR INDIRECTLY ARISING FROM THE USE OF ANY OF THE PRODUCT INCLUDING, BUT NOT LIMITED TO, DAMAGE OR LOSS OF OTHER PROPERTY OR EQUIPMENT, LOSS OF PROFITS OR REVENUE, COST OF CAPITAL, COST OF PURCHASED OR REPLACEMENT GOODS, OR CLAIMS OF CUSTOMERS OF PURCHASER.